



Promax Manual Elevation Release



When the Promax is stuck in the up position due to no power or a communication error. You can loosen this 6mm Allen key bolt slightly and the unit will drop to the down position with gravity. Then re-tighten for travel, just firm (don't overtighten this bolt).

Note, once this is completed it means that the gears and the head are no longer in the correct position to operate. Once the external issue affecting the operation is corrected. loosen the EL bolt again and re-power the unit and once the red home light becomes solid you can now retighten the EL bolt, just firm (don't overtighten this bolt).