



Promax Manual GPS Setting

- 1) Power unit on and wait for the red home light to become solid
- 2) Press the "Set" key once and you should see "saved location" and then "press OK to change city"
- 3) Press "OK" key and using the arrow keys select your state, once the state is set press "OK" again
- 4) Using the arrow keys select your closest town or city and press "OK"
- 5) You will now be asked to confirm the state and city, Yes? Press "OK" and the GPS location is now changed.
- 6) You can now press "Ok" to search for the satellite again.

Note, whilst the automatic GPS setting is not operating you will need to set the GPS manually each time you move locations.